



# MAINTAINING TENTS

This guide contains some simple suggestions on how to maintain tents.

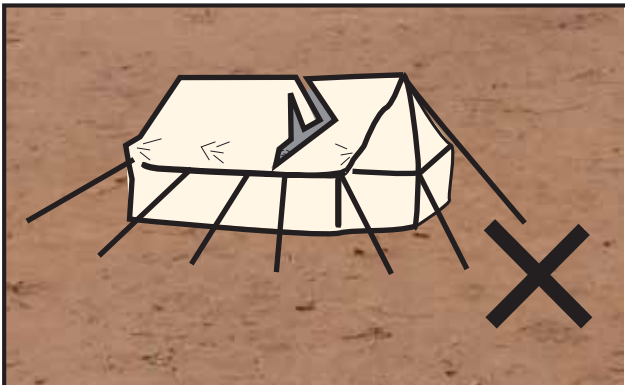


**Do not let sharp sticks touch the tent.**

They will rip the canvas.

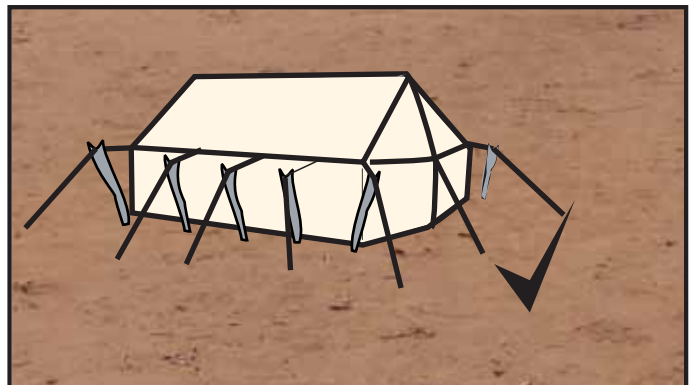

**Try to put pegs 2m away from the tent**

If there is no space you can put forked sticks outside to raise the ropes

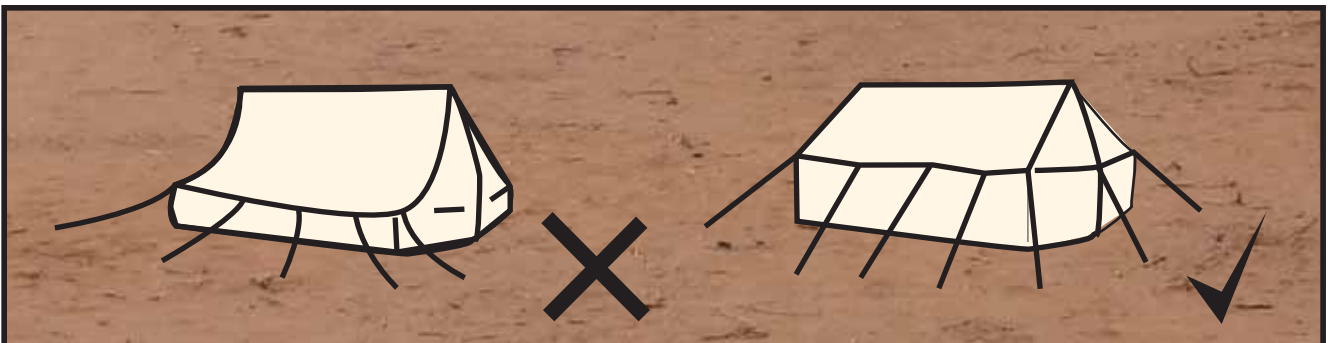

**Keep ropes tight.**


This will prevent the canvas from flapping in the wind and damaging the tent.



**Dig drainage ditches**

To prevent flooding they should be 30cm deep.

**BEWARE  
OF FIRE**

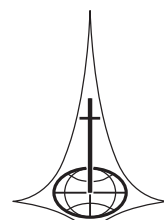

THE LUTHERAN  
WORLD FEDERATION  
A Communion of Churches